

INSTRUCTION SUPPLEMENT FOR FHP30-03COB-HX INSTALLATION



To accommodate the thicker high performance FLUIDYNE High Performance heat exchanger, adjustment to the power steering cooler location is necessary.


Included with the FHP30-03COB-HX should be:

- one (1) bracket
- one (1) 6MM bolt and nut
- two (2) flat washers

INSTRUCTIONS:


Remove the bolt holding the cooler in the factory location (Figure 1). Use the supplied nut, bolt and washers to attach the supplied bracket to the existing cooler bracket, as shown in Figure 2. Rotate the cooler so that the lower hole on the supplied bracket lines up with the original mounting hole on the frame. Use the factory bolt to mount the new bracket to the frame.

FIGURE 1

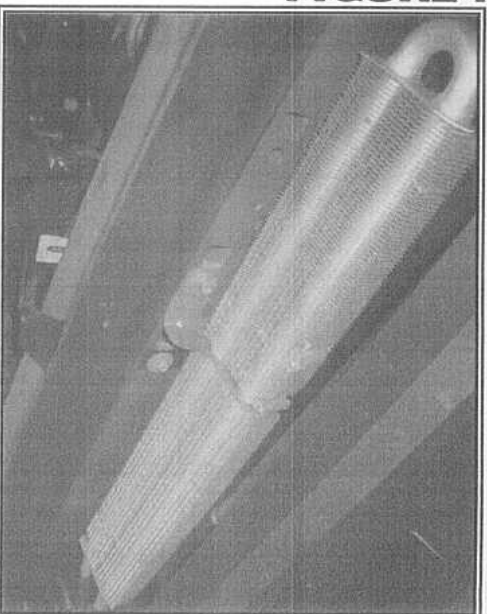

FACTORY CONFIGURATION

FIGURE 2

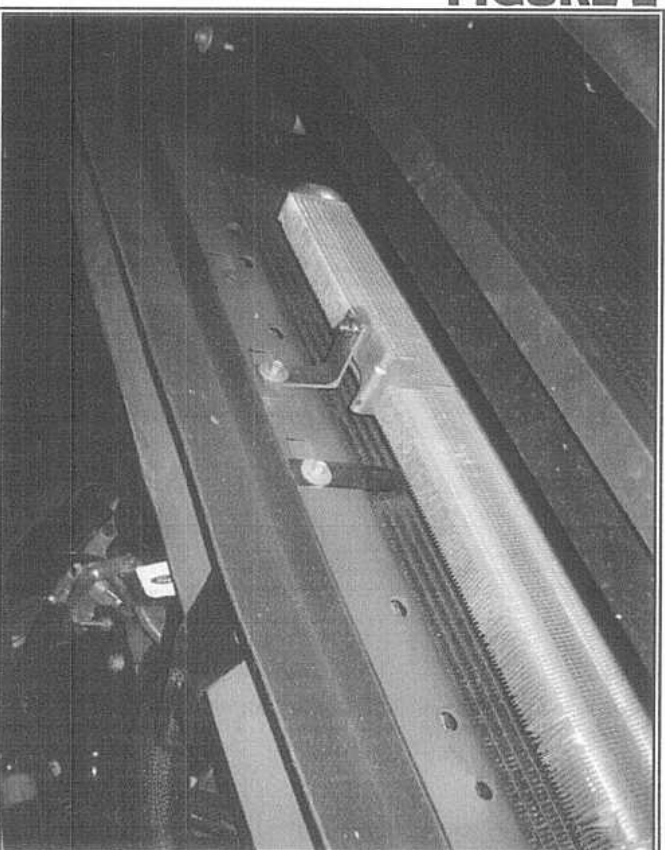

NEW MOUNTING CONFIGURATION

174 Gasoline Alley Mooresville, NC 28117

2605 East Cedar St Ontario, CA 91761

PH:888-358-4396 FAX:704-662-8120

DH:800-358-1396 FAX:900-833-8707